



51 PREMIUM WALL BASE ADHESIVE

Vinyl, Rubber and Carpet Base Adhesive

Description

R&D 51 Premium Wall Base Adhesive is a water based, low VOC, trowelable adhesive designed for all types of vinyl, rubber and carpet base. It is suitable for use on all absorbant surfaces. It is solvent free and has a low VOC content, making it environmentally friendly and ideal for use in buildings that are occupied.

Typical Uses

For installation of the following

- Vinyl Cove Base
- Rubber Cove Base
- Carpet Base

Features

- Environmentally Friendly
- Low VOC Content
- Water Based
- Fast Setting
- Non-Flammable

Limitations

- For interior use only
- Do not use over non-pouous surfaces
- Substrate and room temperature should be maintained at 20°C (70°F) during installation
- Freshly plastered walls must be allowed to dry at normal room temperature

Theoretical Coverage

- Approximately 220 linear feet (67 linear metres) per U.S. Gallon (3.78 Litres) when using a 1/8" X 1/8" X 1/8" (3.2 X 3.2 X 3.2 mm) trowel and 4" (10 cm) wall base
- Coverage will vary depending on substrate, wall base size and trowel size

Physical Properties

VOC Content	<10 g/L Less Water
Solids Content	59%
Flammability	Non-Flammable
Density	11.95 Lbs/US Gal Approx
Consistency	Trowelable Paste
Colour	Off White
Shelf Life	1 Year in Unopened Container
Packaging	1 US Gal (3.78 L) 3.5 US Gal (13.25 L)

Application

All surfaces to which the base is to be applied must be completely free from grease, oil and dirt, etc. Freshly plastered walls must be allowed to dry at normal room temperature.

Cove base which has been rolled or folded must be permitted to regain its original shape. All installations and preparation should be done at a room temperature of not less than 20°C (70°F). All materials must be at room temperature for a period of 24 hours prior to installation.


The adhesive must be applied in an even manner to the wall. A notched 1/8" X 1/8" X 1/8" (3.2 X 3.2 X 3.2 mm) trowel should be used. For coarser or more absorbent surfaces a more deeply notched trowel will be necessary. There should be a transfer of at least 60% adhesive to the back of the cove base to ensure an adequate bond.

R&D Technical Solutions Ltd.

7000 Davand Drive, Mississauga, ON L5T 1J5 Canada Tel: 905.795.9900 Toll Free: 800.387.5703 Fax: 905.795.9912

www.rdsolutions.ca

Revision Date: August 8, 2022

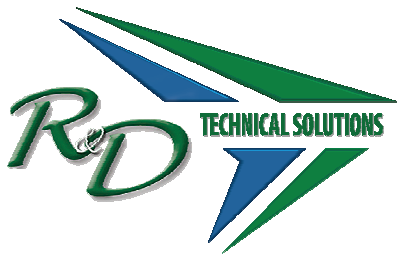

51

PREMIUM WALL BASE ADHESIVE

Apply the base to the wall within ten (10) minutes of the application of the adhesive. The toe of the base must be butted to the floor, then press the base firmly against the wall. To complete the bond, apply pressure over the entire surface with a small roller, or by pressing firmly with the palm of the hand. Clean off excess adhesive with a damp cloth.

Always follow installation instructions of flooring manufacturer.

Clean Up

Wet adhesive can be cleaned up with water and a damp cloth. Dried adhesive can be cleaned with mineral spirits.

Safety Precautions

Please refer to product Safety Data Sheet

R&D Technical Solutions Ltd.

7000 Davand Drive, Mississauga, ON L5T 1J5 Canada Tel: 905.795.9900 Toll Free: 800.387.5703 Fax: 905.795.9912

www.rdsolutions.ca

Revision Date: August 8, 2022